

**INSTALLATION INSTRUCTION**  
**Low Voltage LED MR16 Display Spot Lights**  
ME-808


**WAC LIGHTING**  
Responsible Lighting®

**SAFETY INSTRUCTION**

Always turn off power at fuse box prior to installation to prevent electrical shock.  
For installation by a qualified electrician.  
Line voltage wire must be 12awg BX or Romex wire.  
Install over a standard 4 inch junction box.  
All wires must be contained in the junction box.

**TO HARD WIRE:**

1. Loosen the three canopy screws twist and separate the canopy cover from the base plate.
2. Remove knock out from the base plate.
3. Guide the white and black wires from the transformer through the knock out in the base plate and into the Junction box.
4. Connect with like colored line volt wires from the junction box to transformer wires, with wire nuts (supplied).
5. Connect green grounding wire from junction box (may be bare copper wire) to green wire from fixture.
6. Attach the base plate to a junction box using slotted holes.
7. Mount the canopy to the base plate by twisting key holes over three screws in base plate.
8. Tighten screws to secure canopy.

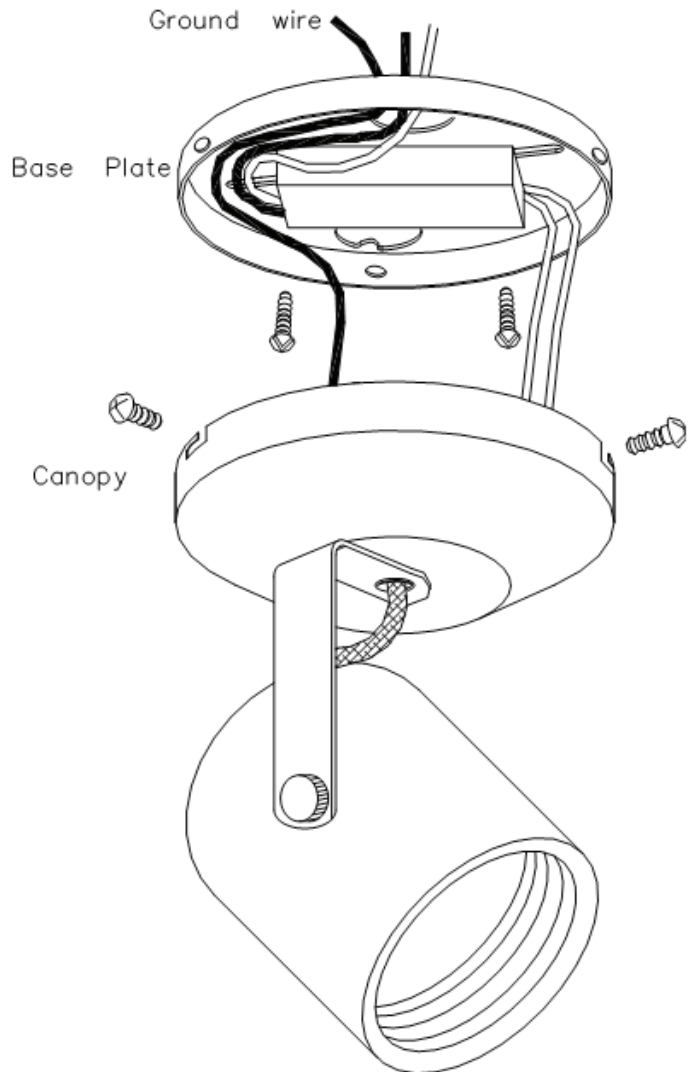

**WAC Lighting**  
www.waclighting.com  
Phone (800) 526.2588 • Fax (800) 526.2585

**Headquarters/Eastern Distribution Center**  
44 Harbor Park Drive • Port Washington, NY 11050  
Phone (516) 515.5000 • Fax (516) 515.5050

**Western Distribution Center**  
1750 Archibald Ave • Ontario, CA 91761  
Phone (800) 526.2588 • Fax (800) 526.2585